




## INSTALL GUIDE

# 15+ MUSTANG LED TAIL LIGHTS INSTALL GUIDE

**WARNING:** By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its distributors make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

## PACKAGE CONTENTS

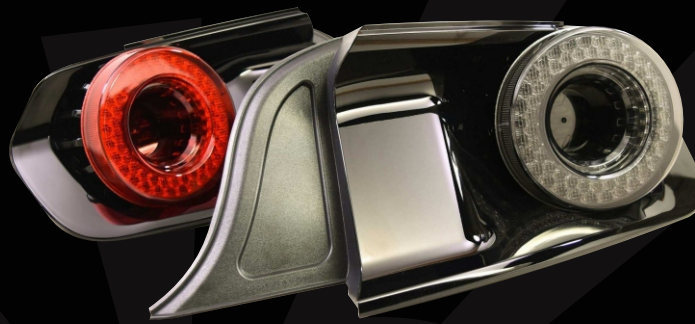

2X TAIL LIGHT ASSEMBLIES

**IMPORTANT:** If your vehicle is equipped with anything but OEM turn signals (full assemblies, LED bulbs, or otherwise) in the head lights or elsewhere: You may experience a hyper flash and/or problem with the sequential signal setting on these taillights. This is not a defect in the taillight, and caused by un-matched impedance with your original vehicle settings.

## INSTALLATION PROCESS

1. Remove the four (4) twist-on fasteners holding the trunk panel in place. Apply straight upward pressure to remove the panel from the trunk.



2. Using a panel trim tool or pliers, remove the push-clips retaining the trunk panels.



3. Remove and retain the three nuts holding the tail light on the vehicle. Unclip the stock wire harness connection. Remove the tail light.



4. Remove the upper plastic trim panel from the factory tail lamp. Use a plastic trim removal tool and gently pry upward to release the clips.




5. Fit the stock trim panel to the new tail light assembly and click into place.



6. Re-install new tail lamp in reverse order of removal.



SEQUENTIAL TURN SIGNAL OPERATION

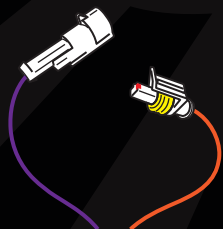

STANDARD (BLINKING) TURN SIGNAL OPERATION

