


# INSTALLATION GUIDE: ACME ARSENAL BALLAST



**WARNING:** By reading this document, I agree it is only to be used as an educational guide. The Retrofit Source makes no guarantee on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below to your own application, professional installation is recommended.

## PACKAGE CONTENTS:




1x SpeedyStart Ballast



1x 3M Double-Sided Tape

## BALLAST WIRING:

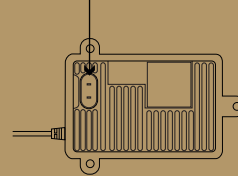


Plug the 9006 input into the ballast output on the harness of your choice / application.

## BALLAST MOUNTING:



If you use the mounting tape, ensure the mounting surface is free of debris, dry to the touch, and has been cleaned thoroughly with rubbing alcohol or a degreaser.

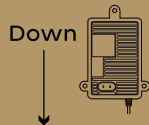

If you prefer mounting the ballast from one of the integrated mounting points, we recommend ensuring the wiring exits the ballast at the bottom to minimize the risk of water ingress.



Plug the AMP-style outputs into the bulb connections of your choice.



**THE RETROFIT SOURCE**

*The Best Brands in Automotive Lighting*

support@theretrofitsource.com

404.220.7940