



THE AUTOMOTIVE LIGHTING BENCHMARK

INSTALL GUIDE

1 BANGER TOP-DOWN BRACKET

BAF251



PACKAGE CONTENTS



2X U-BRACKETS

REQUIRED TOOLS

- T20 TORX DRIVER
- 17MM WRENCH


WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.



1 BANGER TOP-DOWN BRACKET

NOTE: THE HARDWARE USED FOR THIS KIT IS INCLUDED WITH HE 1BANGER POD LIGHTS

1. FIT THE CARRIAGE BOLT THROUGH THE U-BRACKET AND SECURE IT TO YOUR MOUNTING SURFACE USING THE WASHER AND 17MM LOCK NUT. LEAVE THE NUT SLIGHTLY LOOSE TO ALLOW AIMING LATER

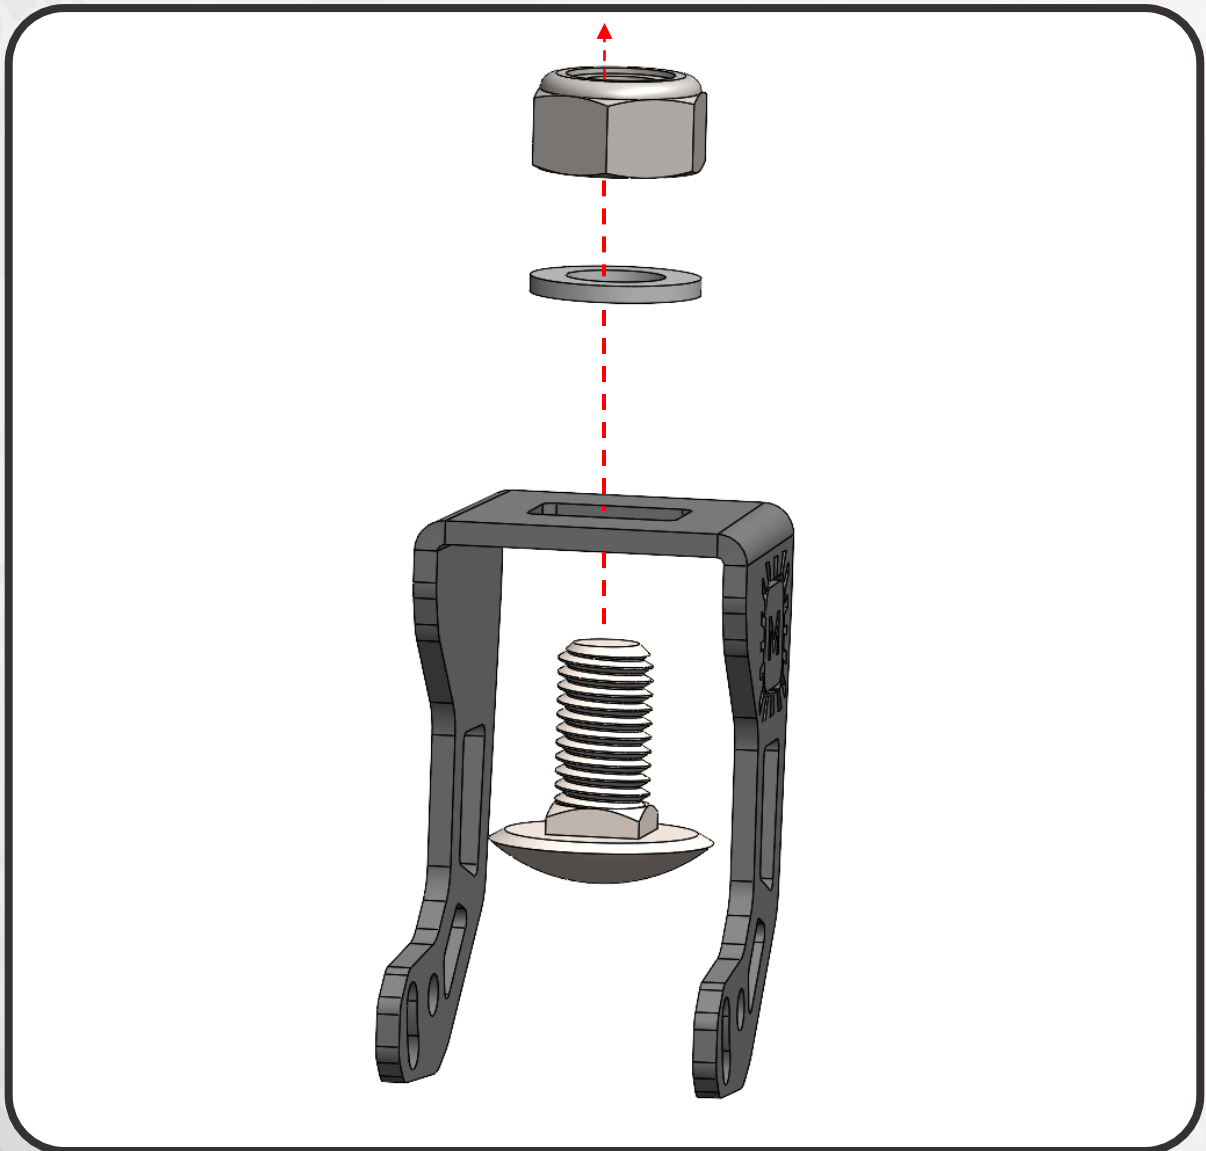

1 BANGER TOP-DOWN BRACKET

2. FIT THE 1BANGER POD INTO THE BRACKET AND LOOSELY INSTALL THE FOUR T20 SCREWS TO HOLD IT IN PLACE
3. SET THE AIM OF YOUR POD AND HAND TIGHTEN ALL HARDWARE IN PLACE

