



BRIGHT IS ONLY THE BEGINNING

INSTALL GUIDE

C7 CORVETTE XB SIDE MARKERS

LF0365/LF2104



WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.




C7 CORVETTE XB HEADLIGHTS

TABLE OF CONTENTS	PAGE
FRONT SIDE MARKET INSTALLATION -----	3
REAR SIDE MARKER INSTALLATION -----	10

WHAT'S INCLUDED



2X (PAIR) AMBER FRONT SIDE MARKERS

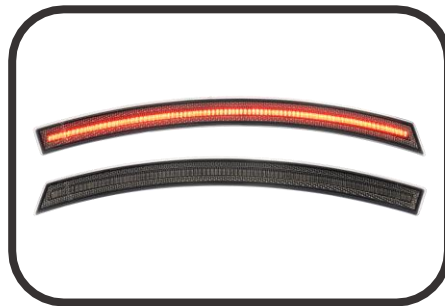

2X (PAIR) RED REAR SIDE MARKERS



REQUIRED TOOLS

- PLASTIC PRY TOOL
- T15 TORX DRIVER




FRONT SIDE MARKET INSTALLATION

1. REMOVE THE THREE T15 TORX SCREWS SECURING THE FENDER LINER TO THE FRONT BUMPER COVER. IT MAY HELP TO TURN THE WHEEL TO THE SIDE TO GAIN ADDITIONAL SPACE TO ACCESS THEM




2. PULL THE SIDE OF THE FRONT BUMPER COVER AWAY FROM THE FENDER, POPPING IT OUT OF THE PLASTIC BRACKET ITS CLIPPED INTO

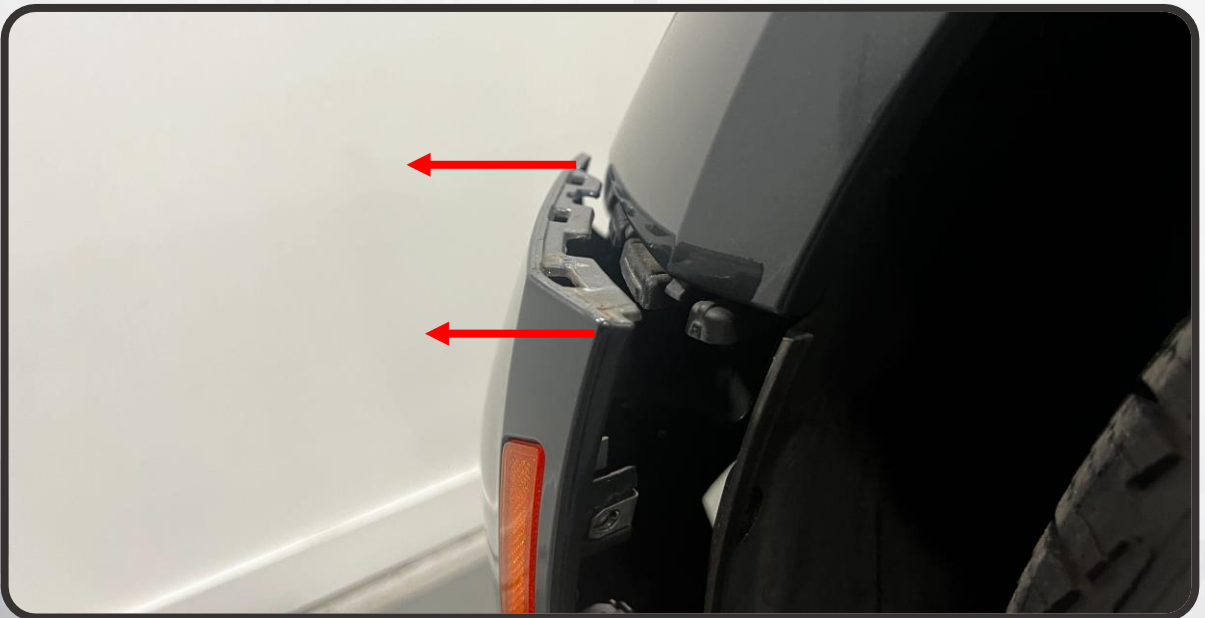

FRONT SIDE MARKET INSTALLATION

3. WHILE GENTLY FLEXING THE BUMPER COVER AWAY FROM THE CAR AND THE FENDER LINER TOWARDS THE CAR, REACH BEHIND THE BUMPER COVER AND DISCONNECT THE PLUG ON THE SIDE MARKER
4. SQUEEZE THE THREE TABS ON THE BACK OF THE SIDE MARKER TO RELEASE THE SIDE MARKER FROM THE BUMPER COVER AND REMOVE THE SIDE MARKER FROM THE VEHICLE

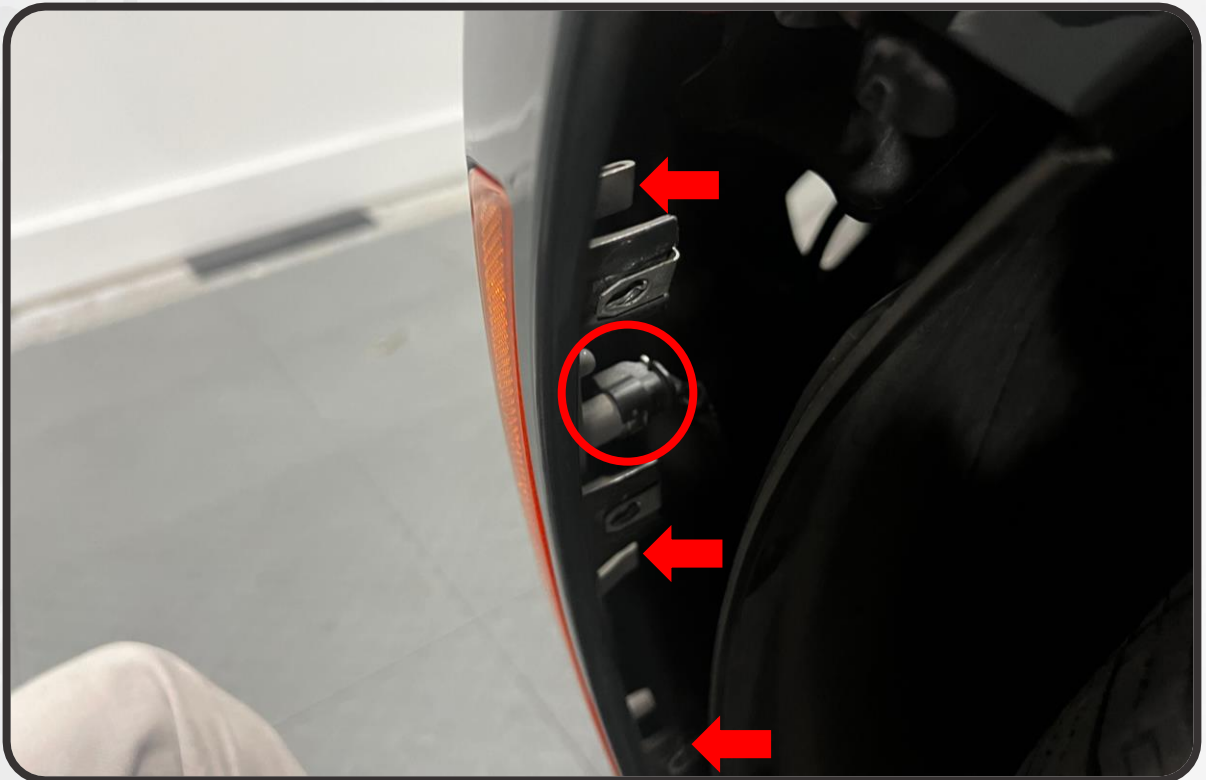


5. INSTALL THE NEW SIDE MARKER ASSEMBLY AND REASSEMBLE THE CAR IN THE REVERSE ORDER OF THE REMOVAL OF THE FACTORY ASSEMBLY
6. REPEAT STEPS 1-5 ON THE OPPOSITE SIDE OF THE VEHICLE




REAR SIDE MARKER INSTALLATION

7. REMOVE THE SPLASH GUARD FROM BEHIND THE REAR WHEEL BY USING A TRIM REMOVAL TOOL AND PRYING FORWARD, RELEASING THE FIVE CLIPS SECURING IT

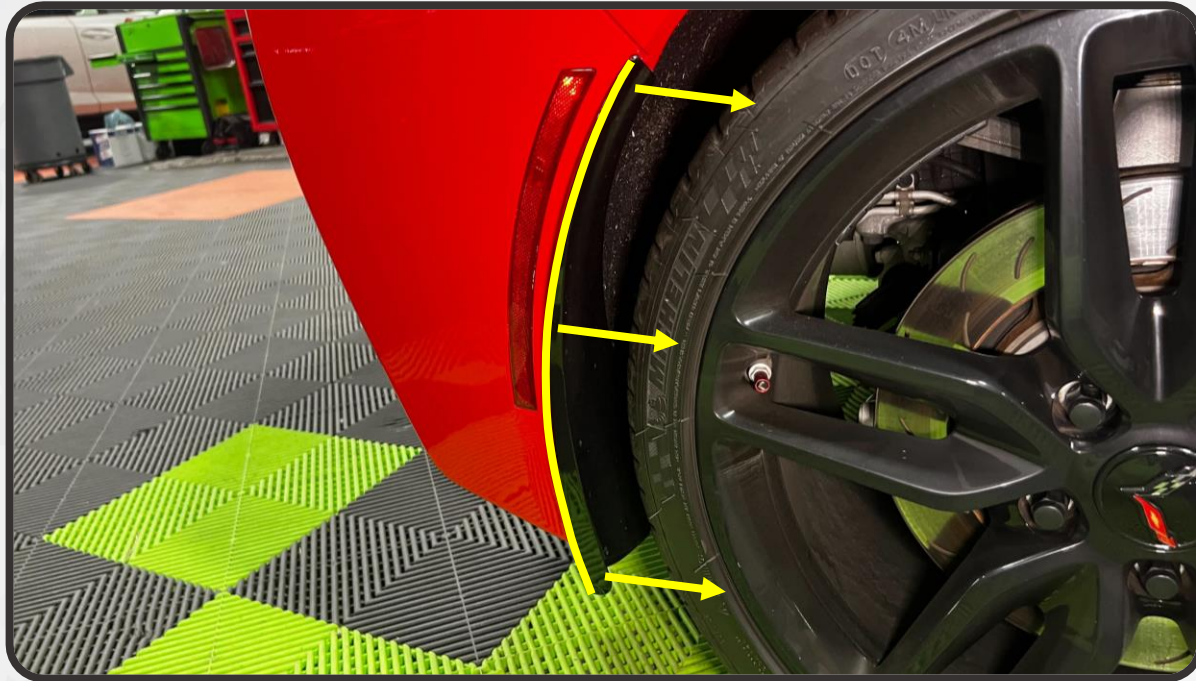


8. REMOVE THE TWO T15 SCREWS FROM BEHIND THE REAR WHEEL THAT WERE UNDER THE SPLASH COVER

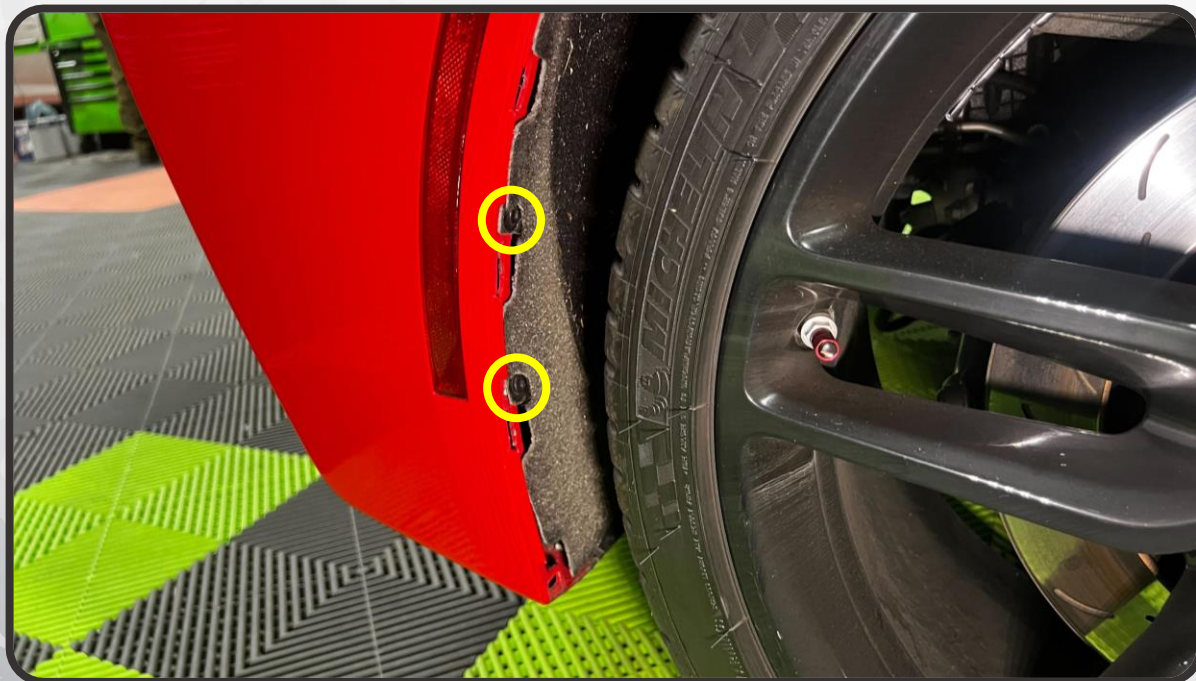

REAR SIDE MARKER INSTALLATION


9. REACHING TO THE INSIDE OF THE BUMPER COVER, DISCONNECT THE SIDE MARKER CONNECTOR. IF YOUR CAR IS LOWERED OR HAS LARGER REAR WHEELS, THE REAR WHEEL MAY NEED TO BE REMOVED TO HAVE ENOUGH ACCESS TO THE BACKSIDE OF THE SIDE MARKER
10. SQUEEZE THE THREE TABS ON THE BACK OF THE SIDE MARKER TO RELEASE THE SIDE MARKER FROM THE BUMPER COVER AND REMOVE THE SIDE MARKER FROM THE VEHICLE

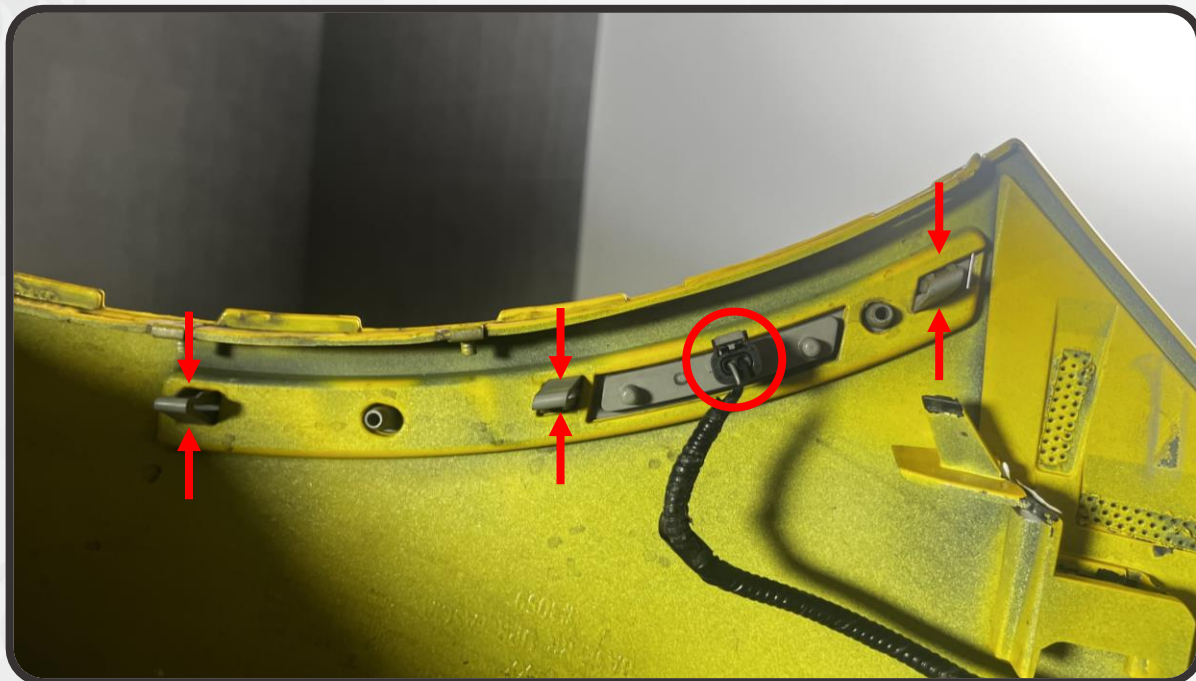

11. INSTALL THE NEW SIDE MARKER ASSEMBLY AND REASSEMBLE THE CAR IN THE REVERSE ORDER OF THE REMOVAL OF THE FACTORY ASSEMBLY
12. REPEAT STEPS 7-11 ON THE OPPOSITE SIDE OF THE VEHICLE
13. GET IN THE CAR AND CONFIRM THAT ALL FUNCTIONS ARE WORKING PROPERLY



C7 CORVETTE XB SIDE MARKERS

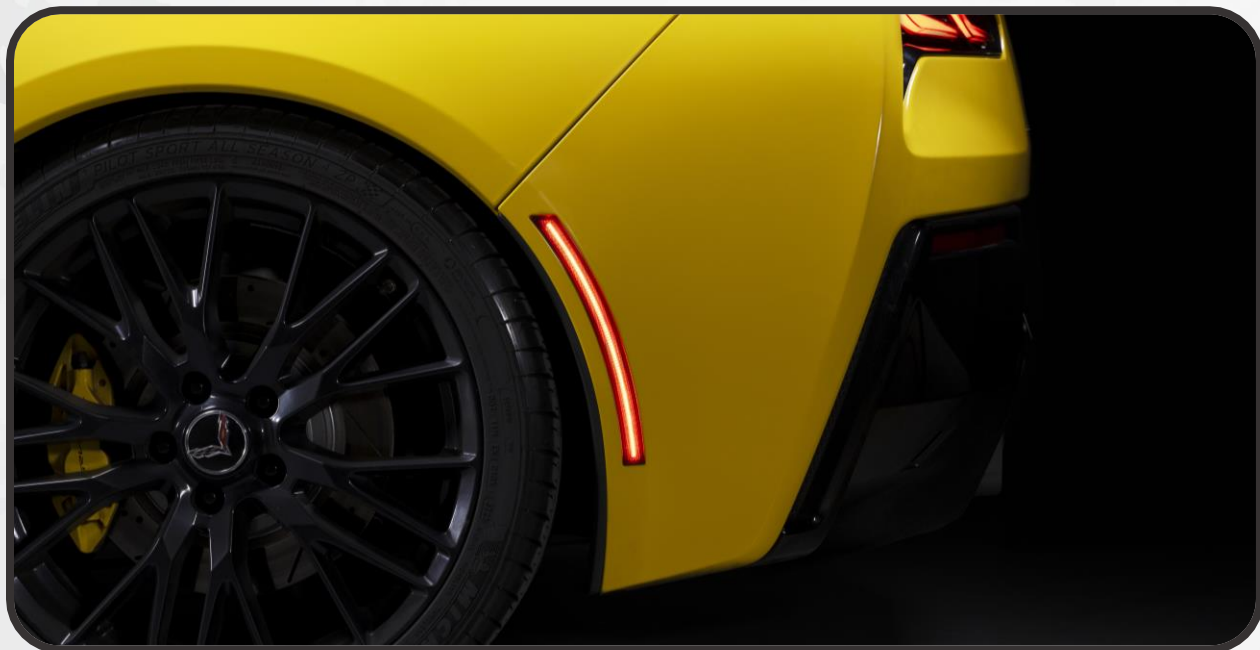

- ENJOY YOUR NEW MORIMOTO XB SIDE MARKERS! -

