




baja designs[®]
The Scientists of Lighting

**Chevrolet Silverado (2016-18)
Squadron Fog Pocket Kit
44-7534, 44-7535, 44-7536, 44-7537**

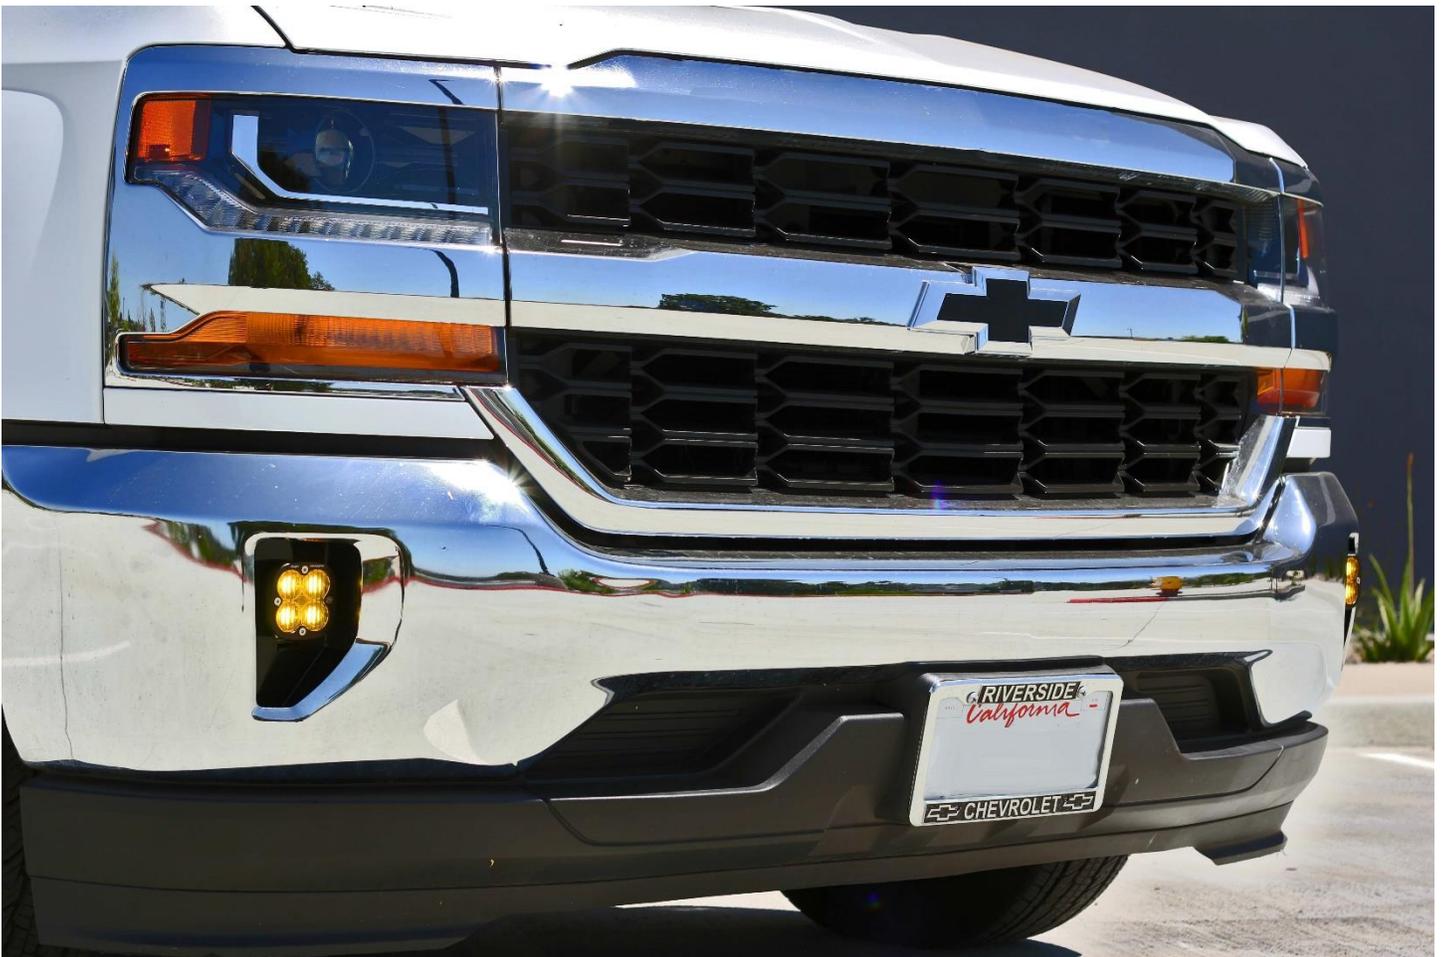

185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs[®]
The Scientists of Lighting

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies

Silverado Squadron Fog Pocket kit



Tools Required

- 4mm Allen wrench
- 7mm socket wrench (1/4" drive)
- 1/4" drive extension
- 9/16" Socket wrench
- 9/16" wrench



1. To begin, put the car in park and disconnect the battery.
2. You can access the OEM fog lights from the underside of the bumper. Unlock the fog lamp connector by sliding the red plastic portion in the direction shown on the right. To remove the connector, press in on the black detent and pull away from the light.
3. There are four 7mm head screws in the circled locations on the right. (Passenger side fog light shown). Remove the four screws and then the fog lamp assembly. The mounting hole shown by the dashed circle on the right will not be used again. Repeat for the opposite side.



4. The captive nuts that are in each mounting hole may come loose. To reset them, press on the small arrowed tab below in the direction shown. Slide the nut back over the mounting hole and they should snap into place.



5. Locate the hardware bag. Use the 9/16" hex head hardware to attach the Squadron bracket to the fog pocket mount (see passenger side exploded view below on the left for reference). Now, using the 4mm Allen head hardware, place the light onto the Squadron bracket through the front opening of the fog pocket mount (See exploded view on right below). Repeat for the opposite side.

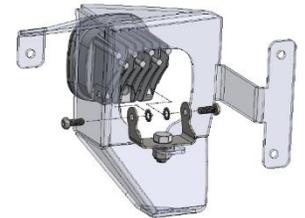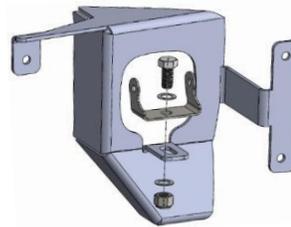

6. Place the new fog pocket assembly over the three circled mounting holes below and thread in the OEM screws. Tighten the fasteners. Plug the harness adapter into the OEM harness and into the Squadron power cord. Lock the OEM connector. Repeat for the opposite side.



7. Tie all wires away from any hot or rotating components. Reattach battery.

Re-torque all the fasteners after 100 miles.
Your install is now complete! Thank you for choosing Baja Designs.